

PT111B/PT124B/PT131B Series

One key to reset zero

Cost-effective Type



Certification :

ISO9001-2015



Content

1.Introduction	_____
2.Application	_____
3.Product features	_____
4.Technical data	_____
5.Dimensions	_____
6.Electrical connection and debugging	_____
7.Ordering Guide	_____
8.Installation and Removal	_____
9.Sensors cleaning	_____
10.Transport and storage	_____

1. Introduction

PT111B/PT124B/PT131B melt pressure transmitter is an accurate measuring equipment. It adopts high quality core element and one key to reset zero circuit design, which could obtain 1.0% FSO measurement accuracy.

2. Application

PT111B/PT124B/PT131B series melt pressure transmitters are It is an ideal product for on-site display of melt pressure measurement during the extrusion of pipes, sheets, recycled plastics and other plastics

3. Product Features

Five-core electrical connection	Cost-effective
Accuracy +/-0.1% FS	Good stability and repeatability

4. Technical Data


Pressure Range	0 ~ 35bar;0 ~ 2000bar	
Accuracy	±1.0%	
Over load Pressure	1.5FSO	
Bridge Resistance	350Ω Wheatstone bridge	
Output Signal	4 ~ 20mA	0 ~ 10Vdc、0 ~ 5Vdc
Power	9 ~ 36Vdc (Standard24Vdc)	18 ~ 36Vdc
Load Resistance (Ω)	< (U-9) /0.02	> 10K
Calibration	80%FSO	
Process Connection	M14×1.5、1/2-20UNF、M22×1.5	
Insulation Resistance (50Vdc)	1000MΩ	
Diaphragm Material	17-4PH	
Diaphragm max temp	300C°	
Film Material	TiAlN	
E-connection	5-pin connector(Standard)	
Electrical Environment temp	-20C° ~ 85C°	
Thermocouple	J Type,E Type,K Type,pt100	
Protection degree	IP65	
Installation torque	< 30Nm	
Filling Material	Mercury filling	

6. Electrical connection & Debugging


After the pressure sensor has been installed on the line, the electrical connection must be the same as shown in the wiring diagram below.

The PT111B/PT124B/PT131B pressure sensor is equipped with an integrated amplification circuit, the calibration process must be that the pipeline is heated and the pressure is zero. The zero point is adjusted by twisting the top of the shell "Z" position screw, with a toothpick - like item, tap the button by 3 seconds, (" please don't touch point S"). If mV signal has no this function, it can be rezero through the back - end instrument. The output signal is then detected by 80% (see the wiring diagram), and the pressure sensor will provide a standard 80% measurement signal.

4...20mA (2-wire)

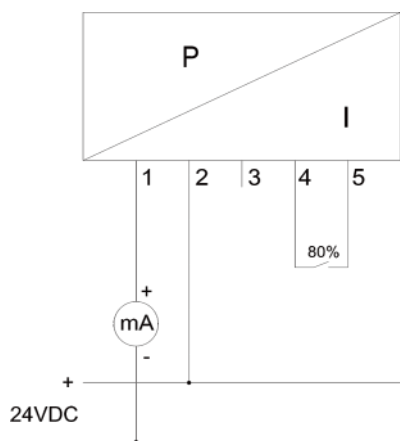


5-pin connector / XS12J5Y-5PIN

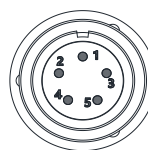


PIN	Function	Wire Color
1	Power -	Blue
2	Power +	Red
3		White
4	80% -	Yellow
5	80% +	Black

0...5V/10V (4-wire)

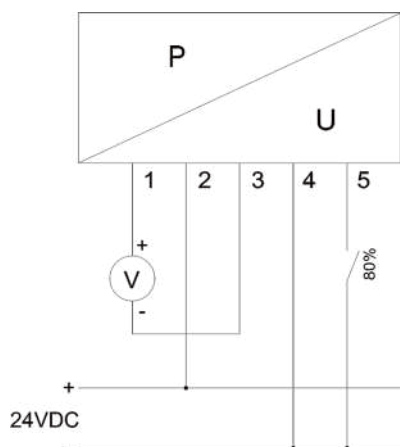


5-pin connector / XS12J5Y-5PIN

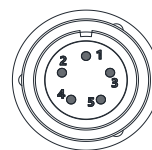

PIN	Function	Wire Color
1	Signal +	Blue
2	Power +	Red
3	Signal -	White
4	Power - / 80% -	Yellow
5	80% +	Black

* 3 and 4 pins are connected internally

Cable cable shall be made with shield cable, and the temperature-resistance of each core shall not be less than 105 C°. Each core connection column shall be insulated and protected by heat shrink pipe, and the shield wire shall be connected to the plug metal. Special care shall be taken during cable welding, otherwise it may lead to wrong signal transmission or damage the product. It is recommended to use the welded special cable wire by Ziasiot . For excess wires in the cable, each wire shall be wrapped with insulating tape.

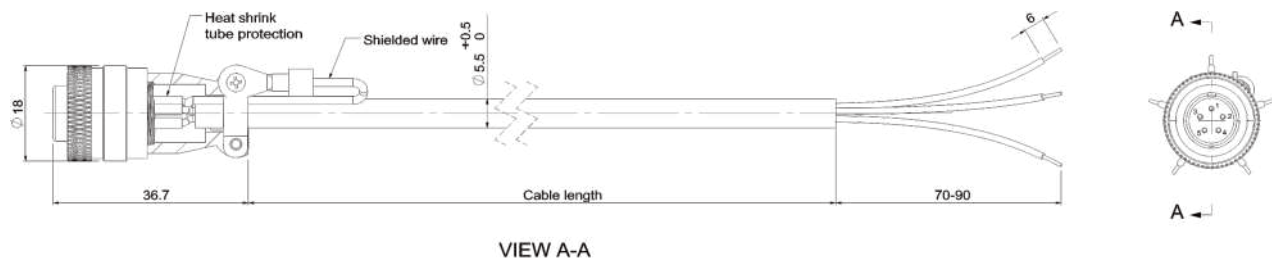

7. Ordering Guide

Serie No	PT	X	-	X	-	X	-	X	-	X	-	X
Product Type	Rigid Stem	111B										
	Rigid+flexible stem	124B										
	With thermocouple	131B										
Pressure Range	10MPa 100bar 1500psi			1.5M								
	20MPa 200bar 3000psi			3M								
	35MPa 350bar 5000psi			5M								
	50MPa 500bar 7500psi			7.5M								
	70MPa 700bar 10000psi			10M								
	100MPa 1000bar 15000psi			15M								
Process Connection	1/2-20UNF					1/2						
	M14×1.5					M14						
	M22×1.5 (Rotatable rigid rod)					M22						
	M18×1.5					M18						
Rigid stem Length	6" (152mm)					6						
	9" (229mm)					9						
	12.5" (318mm)					12						
	15" (381mm)					15						
	18" (460mm)					18						
Flexible stem Length	18" (460mm)							/18				
	24" (610mm)							/24				
	30" (760mm)							/30				
Output Signal	4 ~ 20mA									MA		
	0 ~ 10Vdc									10V		
Thermocouple	J Type										J	
	K Type										K	
	E Type										E	
	Pt100										RTD1	

8. Installation & Removal




Installation

When installing the pressure sensor, the sensor hole should be within the size requirement marked in following drawing and the assembly accuracy can be checked by testing bolts. Before installing the sensor, first clean the impurities in the hole and between the threads, then the thread of the sensor is coated with heat-resistant slurry, the screw teeth can be avoided.

The installation force is very important, the installation torque of the sensor can only act on the shaft (hexagon), do not apply any force to the head of the sensor. The housing should be kept away from high temperature areas.


1/2-20 UNF /M14×1.5= Maximum starting torque : 40Nm

M18 x 1.5/M22×1.5 =Maximum starting torque : 50 Nm

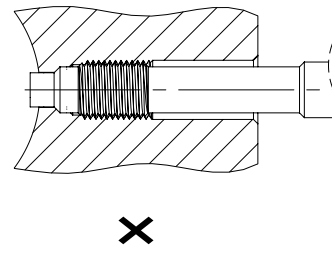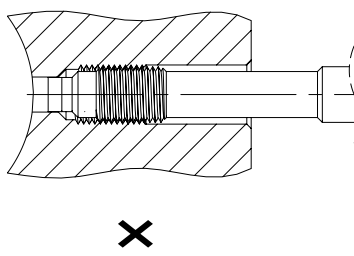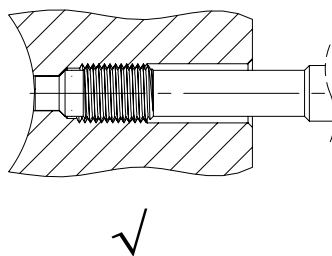


Removal

The removal of the pressure sensor must be done under heating conditions (plastic melting point). When removing the sensor, please note that the diaphragm has no contact pressure. the force to unload the sensor must be applied only on the shaft (hexagon) and do not apply any force to the sensor head.

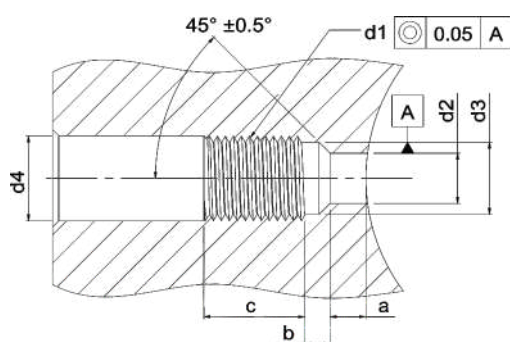

d1	M18X1.5	M14X1.5	1/2-20UNF-2A
d2	∅ 9.9 ^{+0.1}	∅ 7.9 ^{+0.1}	∅ 7.9 ^{+0.1}
d3	∅ 16.1 ^{+0.1}	∅ 11.7 ^{+0.1}	∅ 10.7 ^{+0.1}
d4	∅ 20	∅ 15	∅ 14
a	6.1 ^{-0.1}	5.7 ^{-0.1}	5.7 ^{-0.1}
b	4 ^{-0.2}	3.2 ^{-0.2}	3.2 ^{-0.2}
c	25	19	19

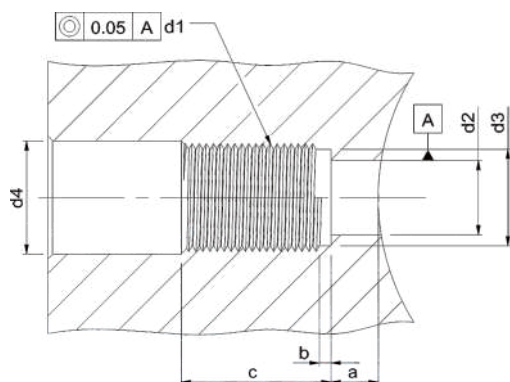

d1	M22X1.5
d2	∅ 15.8 ^{+0.1}
d3	∅ 19.9 ^{+0.1}
d4	∅ 24
a	10 ^{+0.2}
b	2 ^{-0.2}
c	35

9. Sensors cleaning

In order to clean the diaphragm, the sealing surface and thread of the sensor must have the same temperature as the melting point of the plastic. Both the diaphragm and the sealing surface can be wiped clean with a soft cloth, and the thread can be cleaned with a steel brush or a copper brush. . (Do not touch the surface of the diaphragm with the steel brush)

10. Transport and storage

PT111B/PT124B/PT131B pressure transmitter is usually packed separately. At the front thread of the rigid rod, the induction diaphragm is protected by a protective cap. This protective cap should be tightened at any time during storage, and only opened during installation.

Note: Mounting brackets, extension cables, connectors, cleaning kits, drill kits, dummy plug etc accessories, please contact with us.